

# 449

**Brand:** Omega  
**Product Code:** 449  
**Availability:** In Stock  
**UPC:** 289530481217  
**FCC ID:** L2M449  
**MPN:** 449  
**Location:** Cleveland, Ohio

**Price: \$29.99**

## Short Description

1-Way 4-Button Remote Control

## Description

**Brand NEW K-9 449-07 1-Way 4-Button Remote Control Transmitter**

The K-9 449-07 by Omega is K-9's 1-way 1/4-mile 4-button remote control. Do you have a compatible K-9 system? You can replace those remotes with this K-9 remote control. Reference the application table below.

This remote control is new from the original manufacturer ensuring that you are receiving a genuine product made for your Excalibur system.

## Works with the following K-9 systems:

- K9-MUNDIAL-4
- K9-MUNDIAL-5
- K9-MUNDIAL-6
- K9-MUNDIAL-NSLA+
- K9-MUNDIAL-SS-LA-3
- K9-MUNDIAL-SS-LA
- K9-MUNDIAL-SSA-LA
- K9-MNDIAL-SSR-LA
- MUNDIAL-SSX
- K9-150D-LA

- K9-179-LA

**Will replace the following remote K-9, Omega, Freedom and Excalibur remote controls:**

- 446
- 447
- 448
- 449
- 451
- 4410
- 4411
- 4412
- 4413
- 4415
- 4419
- 4421
- 4422

Please make sure you have a working control unit installed in the vehicle prior to ordering this remote control. Programming instructions are included in the package and will require accessing your valet/programming switch.

Please contact us if you have any questions.

## **PROGRAMMING INSTRUCTIONS:**

Standard Programming: This method to program additional or replacement transmitters does not affect the Unauthorized Transmitter Alert (UTA) feature. Before you begin, have all transmitters which are to operate the system at hand.

1. Turn the ignition "on".
2. Within 5 seconds of Step 1, press the Valet Switch 5 times. The siren/horn will briefly sound, confirming that the system is ready to learn a transmitter code.
3. Press the "lock" button on the transmitter. The system will chirp the siren/horn once to confirm that the remote was learned.
4. If a code is not received within 10 seconds of Step 2, the learning process will automatically exit.

## Programming Instructions

Standard Programming: This method to program additional or replacement transmitters does not affect the Unauthorized Transmitter Alert (UTA) feature. Before you begin, have all transmitters which are to operate the system at hand.

1. Turn the ignition "on".
2. Within 5 seconds of Step 1, press the Valet Switch 5 times. The siren/horn will briefly sound, confirming that the system is ready to learn a transmitter code.
3. Press the "lock" button on the transmitter. The system will chirp the siren/horn once to confirm that the remote was learned.
4. If a code is not received within 10 seconds of Step 2, the learning process will automatically exit.

## Specification

| Remote Control        |          |
|-----------------------|----------|
| Works With Antenna(s) |          |
| Battery Type          | 27A      |
| FCC ID                | L2M449   |
| Frequency             | 433Mhz   |
| Range                 | 1/4-MILE |
| 1-Way or 2-Way        | 1-WAY    |