1513



Brand: Excalibur Product Code: 1513 Availability: In Stock UPC: 289538970577 FCC ID: L2MAL41T MPN: 1513-03E

Location: Cleveland, Ohio

Phone: (216) 252-3000 - Email:

sales@access1alarm.com

Price: \$49.99

Short Description

Excalibur 1513 1-Way 1-Mile Range Remote Control

Description

Brand NEW Excalibur 1513-03E 1-Way 1-Mile Range Remote Control Transmitter

The Excalibur 1513-03E is Excalibur's premium 1-way 1-mile 4-button remote control. Do you have a compatible Excalibur systems? You can replace those remotes with this Excalibur remote control. Reference the application table below.

This remote control is new from the original manufacturer ensuring that you are receiving a genuine product made for your Excalibur system.

Works with the following Excalibur systems:

AL-2075-3DBL

Will replace the following remote Excalibur remote controls:

- 1512-03E
- 1513-03E

Please make sure you have a working control unit installed in the vehicle prior to ordering this remote control. Programming instructions are included in the package and will require accessing your valet/programming switch.

Please contact us if you have any questions.

PROGRAMMING INSTRUCTIONS:

Standard Programming: This method to program additional or replacement transmitters does not affect the Unauthorized Transmitter Alert (UTA) feature. Before you begin, have all transmitters which are to operate the system at hand.

- 1. Turn the ignition "on".
- 2. Within 5 seconds of Step 1, press the Valet Switch 5 times. The siren/horn will briefly sound, confirming that the system is ready to learn a transmitter code.
- 3. Press the "lock" button on the transmitter. The system will chirp the siren/horn once to confirm that the remote was learned.
- 4. If a code is not received within 10 seconds of Step 2, the learning process will automatically exit.

Programming Instructions

Standard Programming: This method to program additional or replacement transmitters does not affect the Unauthorized Transmitter Alert (UTA) feature. Before you begin, have all transmitters which are to operate the system at hand.

- 1. Turn the ignition "on".
- 2. Within 5 seconds of Step 1, press the Valet Switch 5 times. The siren/horn will briefly sound, confirming that the system is ready to learn a transmitter code.
- 3. Press the "lock" button on the transmitter. The system will chirp the siren/horn once to confirm that the remote was learned.
- 4. If a code is not received within 10 seconds of Step 2, the learning process

will automatically exit.

Specification

| Remote Control | |
|-----------------------|--------------|
| Works With Antenna(s) | HR LoRa ONLY |
| Battery Type | 23A |
| FCC ID | L2MAL41T |
| Frequency | 900Mhz |
| Range | 1-MILE |
| 1-Way or 2-Way | 1-WAY |