

# 095BPR

**Brand:** Pursuit  
**Product Code:** 095BPR  
**Availability:** 9  
**UPC:** 044476068058  
**FCC ID:** ELVATID  
**MPN:** 095BPR  
**Location:** Cleveland, Ohio

**Price: \$44.99**

## **Short Description**

Pursuit 1-Way 5-Button Remote Control

## **Description**

### **New Pursuit 095BPR 1-Way 5-Button Remote Control Transmitter**

Original Pursuit 095BPR 5-button remote control transmitter. Are you looking for a replacement Pursuit remote control for your system or just need an additional remote control? Buy with confidence from Access 1 Alarm and Audio!

This remote control is from the original manufacturer ensuring that you are receiving a genuine product made for your system.

### **Made for the following Pursuit/Prestige TYPE 9 systems:**

- APS25C
- APS422E
- APS510C
- APS57
- APS57CA
- APS596C
- APS687C
- APS787C
- APS901C
- PRO9051E

- PRO9051I
- PRO9056C
- PRO9056I
- PRO9276C
- PRO9276I
- PRO9276TW
- PRO9556C
- PRO9556CA
- PRO9556I
- PRO9644C
- PRO9644I
- PRO9776C
- PRO9776I
- PRO9800
- PRO9801C
- PRO9801I

**Replaces or works with the following Pursuit/Prestige remotes:**

- IBPR
- 095BPR
- 5BCR10P
- 105BP
- 5BCR14P
- 5BCR10PR
- 101BP
- 08SP
- 1BP
- 091BPR
- 093BPR
- 103BP

Please make sure you have a working control unit installed in the vehicle prior to ordering this remote control. Programming instructions are included in the package and will require accessing your valet/programming switch located on your antenna.

## **Programming**

Standard Programming: This method is used to program additional or

replacement transmitters. Before you begin, have all transmitters which are to operate the system at hand.

1. Turn the ignition key to the on position.
2. Press and release the valet/programming switch 3 times (Siren Chirps).
3. Press the Lock Button of each transmitter you want programmed until you hear a chirp from the horn or siren.
4. Turn the ignition switch off.

The above action programs the Lock, Unlock, Start/Trunk, and Option 1 buttons which are typical for most systems. For additional channel programming beyond the option 1 button, please reference your owners manual.

Please contact us if you have any questions.

---

## **Programming Instructions**

### **Programming**

Standard Programming: This method is used to program additional or replacement transmitters. Before you begin, have all transmitters which are to operate the system at hand.

1. Turn the ignition key to the on position.
2. Press and release the valet/programming switch 3 times (Siren Chirps).
3. Press the Lock Button of each transmitter you want programmed until you hear a chirp from the horn or siren.
4. Turn the ignition switch off.

The above action programs the Lock, Unlock, Start/Trunk, and Option 1 buttons which are typical for most systems. For additional channel programming beyond the option 1 button, please reference your owners manual.

Please contact us if you have any questions.

## **Specification**

## Remote Control

Battery Type	CR2032
FCC ID	ELVATID
Frequency	434Mhz
Range	1/4-MILE
1-Way or 2-Way	1-WAY