095BPR

Brand: Pursuit

Product Code: 095BPR

Phone: (216) 252-3000 - Email:

sales@access1alarm.com

Availability: 5

UPC: 044476068058FCC ID: ELVATIDMPN: 095BPR

Location: Cleveland, Ohio

Price: \$39.99

Short Description

Pursuit 1-Way 5-Button Remote Control

Description

New Pursuit 095BPR 1-Way 5-Button Remote Control Transmitter

Original Pursuit 095BPR 5-button remote control transmitter. Are you looking for a replacement Pursuit remote control for your system or just need an additional remote control? Buy with confidence from Access 1 Alarm and Audio!

This remote control is from the original manufacturer ensuring that you are receiving a genuine product made for your system.

Made for the following Pursuit/Prestige TYPE 9 systems:

- APS25C
- APS422E
- APS510C
- APS57
- APS57CA
- APS596C
- APS687C
- APS787C
- APS901C
- PRO9051E

- PRO9051I
- PRO9056C
- PRO9056I
- PRO9276C
- PRO9276I
- PRO9276TW
- PRO9556C
- PRO9556CA
- PRO9556I
- PRO9644C
- PRO9644I
- PRO9776C
- PRO9776I
- PRO9800
- PRO9801C
- PRO9801I

Replaces or works with the following Pursuit/Prestige remotes:

- IBPR
- 095BPR
- 5BCR10P
- 105BP
- 5BCR14P
- 5BCR10PR
- 101BP
- 08SP
- 1BP
- 091BPR
- 093BPR
- 103BP

Please make sure you have a working control unit installed in the vehicle prior to ordering this remote control. Programming instructions are included in the package and will require accessing your valet/programming switch located on your antenna.

Programming

Standard Programming: This method is used to program additional or

replacement transmitters. Before you begin, have all transmitters which are to operate the system at hand.

- 1. Turn the ignition key to the on position.
- 2. Press and release the valet/programming switch 3 times (Siren Chirps).
- 3. Press the Lock Button of each transmitter you want programmed until you hear a chirp from the horn or siren.
- 4. Turn the ignition switch off.

The above action programs the Lock, Unlock, Start/Trunk, and Option 1 buttons which are typical for most systems. For additional channel programming beyond the option 1 button, please reference your owners manual.

Please contact us if you have any questions.

Programming Instructions Programming

Standard Programming: This method is used to program additional or replacement transmitters. Before you begin, have all transmitters which are to operate the system at hand.

- 1. Turn the ignition key to the on position.
- 2. Press and release the valet/programming switch 3 times (Siren Chirps).
- 3. Press the Lock Button of each transmitter you want programmed until you hear a chirp from the horn or siren.
- 4. Turn the ignition switch off.

The above action programs the Lock, Unlock, Start/Trunk, and Option 1 buttons which are typical for most systems. For additional channel programming beyond the option 1 button, please reference your owners manual.

Please contact us if you have any questions.

Specification

Remote Control	
Battery Type	CR2032
FCC ID	ELVATID
Frequency	434Mhz
Range	1/4-MILE
1-Way or 2-Way	1-WAY