185SPR



Brand: Pursuit

Product Code: 185SPR Availability: In Stock UPC: 044476136221 FCC ID: TBQT12-SS1W

Phone: (216) 252-3000 - Email: sales@access1alarm.com

MPN: 185SPR

Location: Cleveland, Ohio

Price: \$34.99

Short Description

Pursuit 1-Way 5-Button Remote Control

Description

New Pursuit 185SPR 1-Way 5-Button Remote Control Transmitter

Original Pursuit 185SPR 5-button remote control transmitter. Are you looking for a replacement Pursuit remote control for your system or just need an additional remote control? Buy with confidence from Access 1 Alarm and Audio!

This remote control is from the original manufacturer ensuring that you are receiving a genuine product made for your system.

Made for the following Pursuit/Prestige TYPE 24 systems:

- APS596Z
- APS787Z
- APS997Z
- PE1BTWZ
- PE1BTWZ2
- PE1BZLR
- PE2LCDZ
- PE2LEDZ

- PE2RELCDZ
- PE5BZ
- PR1BTWZ
- PR1BXLR
- PR5BZ
- PR09976Z

Replaces or works with the following Pursuit/Prestige remotes:

- 181SP
- 185SP
- 181TWSP
- 185TWSP
- 181XPR
- 185SPR
- 181TWXPR
- 18LCDSP
- 18LCDRE

Please make sure you have a working control unit installed in the vehicle prior to ordering this remote control. Programming instructions are included in the package and will require accessing your valet/programming switch located on your antenna.

Programming

Standard Programming: This method is used to program additional or replacement transmitters. Before you begin, have all transmitters which are to operate the system at hand.

- 1. Turn the ignition key to the on position.
- 2. Press and release the valet/programming switch 3 times (Siren Chirps).
- 3. Press the START Button of each transmitter you want programmed until you hear a chirp from the horn or siren.
- 4. Turn the ignition switch off.

The above action programs the Lock, Unlock, Start/Trunk, and Option 1 buttons which are typical for most systems. For additional channel programming beyond the option 1 button, please reference your owners manual.

Please contact us if you have any questions.

Programming Instructions Programming

Standard Programming: This method is used to program additional or replacement transmitters. Before you begin, have all transmitters which are to operate the system at hand.

- 1. Turn the ignition key to the on position.
- 2. Press and release the valet/programming switch 3 times (Siren Chirps).
- 3. Press the START Button of each transmitter you want programmed until you hear a chirp from the horn or siren.
- 4. Turn the ignition switch off.

The above action programs the Lock, Unlock, Start/Trunk, and Option 1 buttons which are typical for most systems. For additional channel programming beyond the option 1 button, please reference your owners manual.

Please contact us if you have any questions.

Specification

| opoomoation | |
|----------------|-------------|
| Remote Control | |
| Battery Type | CR2032 |
| FCC ID | TBQT12-SS1W |
| Frequency | 900Mhz |
| Range | 1/2-MILE |
| 1-Way or 2-Way | 1-WAY |