# **185BPR**



**Brand:** Pursuit

Product Code: 185BPR Availability: In Stock FCC ID: TBQT12-AM1W

Phone: (216) 252-3000 - Email: sales@access1alarm.com

**MPN:** 185BPR

Location: Cleveland, Ohio

**Price: \$29.99** 

## **Short Description**

Pursuit 185BPR 1-Way 5-Button Remote Control

#### **Description**

New Pursuit 185BPR 1-Way 5-Button Remote Control Transmitter

Original Pursuit 185BPR 5-button remote control transmitter. Are you looking for a replacement Pursuit remote control for your system or just need an additional remote control? Buy with confidence from Access 1 Alarm and Audio!

This remote control is from the original manufacturer ensuring that you are receiving a genuine product made for your system.

# Made for the following Pursuit/Prestige TYPE 23 systems:

- APS25Z
- APS510Z
- APS57TM
- APS57Z
- APS901TM
- APS901TWE
- APS901Z
- PE1BZ

- PR1BZ
- PRO9056Z
- PRO9556Z
- PRO9644Z

#### Replaces or works with the following Pursuit/Prestige remotes:

- 181BP
- 181BPR
- 183BP
- 183BPR
- 185BP
- 185BPR

Please make sure you have a working control unit installed in the vehicle prior to ordering this remote control. Programming instructions are included in the package and will require accessing your valet/programming switch located on your antenna.

## **Programming**

Standard Programming: This method is used to program additional or replacement transmitters. Before you begin, have all transmitters which are to operate the system at hand.

- 1. Turn the ignition key to the on position.
- 2. Press and release the valet/programming switch 3 times (Siren Chirps).
- 3. Press the START Button of each transmitter you want programmed until you hear a chirp from the horn or siren.
- 4. Turn the ignition switch off.

The above action programs the Lock, Unlock, Start/Trunk, and Option 1 buttons which are typical for most systems. For additional channel programming beyond the option 1 button, please reference your owners manual.

Please contact us if you have any questions.

# **Programming Instructions Programming**

Standard Programming: This method is used to program additional or replacement transmitters. Before you begin, have all transmitters which are to operate the system at hand.

- 1. Turn the ignition key to the on position.
- 2. Press and release the valet/programming switch 3 times (Siren Chirps).
- 3. Press the START Button of each transmitter you want programmed until you hear a chirp from the horn or siren.
- 4. Turn the ignition switch off.

The above action programs the Lock, Unlock, Start/Trunk, and Option 1 buttons which are typical for most systems. For additional channel programming beyond the option 1 button, please reference your owners manual.

Please contact us if you have any questions.

#### **Specification**

Remote Control	
Battery Type	CR2032
FCC ID	TBQT12-AM1W
Frequency	434Mhz
Range	1/4-MILE
1-Way or 2-Way	1-WAY